

7 Steps To REQUEST SERVICE FOR YOU FIRE EXTINGUISHER



SCHEDULE



01 **STEP 1**
Call Base Supply Center (BSC) at 253-393-2838- BSC will transfer the call to Fire King.

02 **STEP 2**
Schedule an appointment with Fire King.

INSPECTION



03 **STEP 3**
Fire King will come to the unit and inspect all fire extinguishers. Fire King will identify which fire extinguishers need recharge or need new tags, and which ones that completely unserviceable/expired and get the fire extinguisher demilitarized.

GPC PURCHASE



04 **STEP 4**
Fire King will provide the unit with the quote.

05 **STEP 5**
Unit pay Fire King first through GPC.

06 **STEP 6**
After payment is made, call fire king and schedule another appointment.

07 **STEP 7**
Fire King will come out and replace fire extinguishers that are deemed unserviceable/expired.